

Using the Door Trimmer

1. Wear your protective equipment including ear defenders and goggles.
2. If dust collection equipment has been supplied, make sure that it is connected and working.
3. Always hold the door trimmer firmly with two hands when working.
4. To prevent damage to your blade, check that there are no nails, screws or metal embedded in your door.
5. Place the trimmer near to where you will start your cut with the floor plate resting flat on the floor. Make sure the blade is running at full speed before pushing the blade carefully into the bottom of the door.
6. If the door trimmer starts to labour and slow down, reduce the amount of pressure you apply. Do not overload the trimmer.
7. Switch off if someone approaches you.
8. When the cut is complete, switch the trimmer off and let the blade stop completely before withdrawing it from the bottom of the door.
9. Stop the machine and unplug before making any adjustments.
10. Keep the cable clear of the blade and any sharp edges on your work.
11. If you think the cable may be cut or damaged in any way, switch off and unplug at the mains before inspecting it. If the cable attached to the door trimmer is damaged, stop using the machine. Contact the hire company. If an extension cable has been damaged, do not use it again.
12. Take care not to accidentally pull the plug from the socket.
13. Switch off and remove the plug from the socket before leaving the door trimmer unattended.
14. If your equipment does not work properly do not attempt to repair it. Contact the hire company.

Please keep this leaflet safely as it may be required for future reference



HAE
HIRE ASSOCIATION EUROPE

Hire Association Europe
2450 Regents Court
The Crescent
Birmingham Business Park
Solihull B37 7YF

Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4109
Email: mail@hae.org.uk
website: www.hae.org.uk

©Copyright Hire Association Europe April 2011

Any unauthorised reproduction – manually or electronically – is STRICTLY prohibited

Useful Reference Points • www.hae.org.uk/businessguard

WORK AREA

- ## WORK AREA

OPERATORS

3. Protect other people from the noise and dust. Warn others to keep away.
4. This machine will produce a lot of sawdust: protect valuable carpets and furnishings.

DOOR TRIMMER


- DOOR TRIMMER**
1. Check your machine, cables, plugs and guards. If anything is found damaged,

Before Sta



2. Check that the plug on your machine matches your supply. Do not try to force connections or improvise them.
3. Machines with a cylindrical yellow industrial plug fitted are designed to run off a special 110v supply. The hire company will have provided a portable transformer if you need to power the machine from a normal mains 230v supply. If a portable transformer has been supplied, take care not to injure yourself when moving it about – it may be heavier than you think. Machines designed to run directly from 230v mains will have either a normal square pin plug fitted, or a blue industrial plug.
4. Make sure that the guard is in place, moves freely and slides back to cover the blade when the door trimmer is not in use.
5. Do not lock or jam the guard in the open position exposing the teeth of the blade.
6. Your door trimmer may have a chip ejection aperture or nozzle through which most of the sawdust and chips are blown. If the hire company has supplied sawdust collection equipment, attach it to his nozzle. If you have no sawdust collection equipment keep well clear of this nozzle.
7. With the trimmer unplugged, set and adjust the height of cut against the bottom of the door. Tighten the locking screws.

Every effort has been made by HAE/EHA to ensure that the information given in this document and supporting material is accurate and not misleading. HAE/EHA cannot accept responsibility for any loss or liability perceived to have arisen from the use of any such document/material. Only Acts of Parliament and Statutory Instruments have the force of law and only the courts can authoritatively interpret the law.

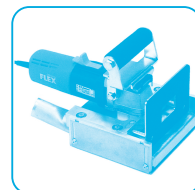

**It is important to read this entire leaflet
BEFORE using the Door Trimmer**

1. Plan your work and think ahead to make sure you will always be working safely.
2. Electricity can be hazardous and must always be used with great care.
3. This door trimmer is designed to trim the bottom of wooden doors without having to take the door off its hinges.
4. The action of this door trimmer can cause injury or damage if the machine is not used in a careful and controlled way.
5. If you have not used a door trimmer before, familiarise yourself with the equipment, before you start on the main task.
6. You must have at least the following items of personal protective equipment: goggles: EN166 or BS2092; dust mask – a minimum of EN149 FFP3(s) protection; ear muffs or plugs giving protection for levels up to 101 dB(A); gloves; rcd if using a 230 volt (mains) supply.
7. This machine must not be used by minors, or by anyone under the influence of drugs or alcohol.
8. This door trimmer is designed for operation by an able bodied adult. Anyone with either temporary or permanent disability must seek expert advice before using it.