



Redistributed under licence from HAE by Frank Key Tool Hire Ltd. Licence expires on 30/09/2020

LIGHTING THE HEATER (...continued)

- 6. After about 30 seconds, when the safety cut-out device has heated up, the pilot valve button can be released.
7. If the burner has not lit, wait for 1 minute before trying again from step 4 above.

STOPPING THE HEATER

- 1. Turn the handwheel on the gas cylinder valve clockwise to the OFF position.
2. Allow the heater to run on fan only for a few minutes until it has cooled down.
3. Switch the fan off and unplug.

CHANGING THE GAS CYLINDER

- 1. Turn the heater off by turning the handwheel on the cylinder valve fully clockwise to the OFF position.
2. Wait until the flame has gone out completely.
3. With the flame out, allow the heater to run on fan only for a few minutes to cool down.
4. Ensure there are no naked flames nearby and the room is well ventilated.
5. Switch the fan off. Unscrew the regulator connecting union using the correct spanner.
6. Put the regulator assembly to one side, taking care not to damage the hose and union assembly.
7. Take any plastic protective plug out of the valve on the new cylinder and save for refitting to the old cylinder.
8. Check the valve connection on the new cylinder is the same as the one on the old cylinder and the threads are undamaged.
9. If the valve connections are the same, move the empty cylinder to a safe location.
10. Fit to the empty cylinder any plastic protective plug kept from the new cylinder.
11. Check the threaded connection on the regulator is clean and undamaged.
12. If the cylinder connection does not appear to be gas tight, do not try to light the heater.
13. Check the valve handwheel is turned fully clockwise to the OFF position.
14. If the heater does not work properly, do not try to repair or adjust it.

Please keep this leaflet safely as it may be required for future reference



Hire Association Europe
2450 Regents Court
The Crescent
Birmingham Business Park
Soliuhull B37 7YE

Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4109
Email: mail@hae.org.uk
website: www.hae.org.uk

Forced air Heater

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment.

It is important to read this entire leaflet BEFORE using the Forced Air Heater

- 1. Plan the use of the heater so that it can always be used safely. Do not leave it unattended if there is any risk of fire or burns to persons.
2. Propane gas is highly flammable and must always be used with great care. Cylinders must not be stored in occupied domestic premises.
3. Electricity can be hazardous and must always be used with great care.
4. The heater is designed to provide a flow of heated air for general heating of warehouses, factories and other large open spaces.
5. The heater must not be used where there is a fire risk from combustible materials or flammable liquids or gases.
6. Heated air and direct radiant heat from the heater can damage nearby objects as well as presenting a fire risk.
7. The heater must not be lit, moved or adjusted and the gas cylinder must not be changed by minors or by anyone under the influence of drugs or alcohol.
8. The heater is designed for operation by an able bodied adult.
9. A residual current device (rcd) will be required for 230v heaters.



PROPANE GAS SAFETY

- 1. Keep gas cylinders upright at all times - whether in use, in store or being moved.
2. Propane gas cylinders should not be stored inside a building, even when they appear to be empty.

(Continued overleaf...)



Every effort has been made by HAE/EHA to ensure that the information given in this document and supporting material is accurate and not misleading. HAE/EHA cannot accept responsibility for any loss or liability perceived to have arisen from the use of any such document/material.

Any unauthorised reproduction - manually or electronically - is STRICTLY prohibited

Copyright Hire Association Europe April 2011

LIGHTING THE HEATER
1. This section describes the starting procedure for most forced air heaters. If the hire company has given special instructions for the heater, follow them. Otherwise, follow the instructions given below.
2. Check there is nothing in front of the heater that could catch fire. Do not lean over the heater when starting it.
3. Switch the fan on and let it run up to speed. Turn the handwheel on the gas cylinder valve anti-clockwise to the ON position. Press and hold the pilot valve button and then push the ignition button until it clicks. Continue to hold the pilot valve button in. This allows the safety cut-out device to come into operation.

110 VOLT MACHINES (YELLOW PLUG)
1. If using a portable transformer, plug the transformer directly into the 230V socket. Do not use any extension cables.
2. If an extension cable is required to be used, lay the extension cable out carefully between the transformer and the machine. The extension cable must only be used on no longer than 50 metres (160 feet). The extension cable must only be used if given any special instructions given by the hire company. If the hire company has not given any special instructions, use a suitably rated heavy duty 110v extension cable plugged directly into the 230v socket. Plug (RCD) Use a residual current device ("RCD")

1. Check the heater including mains cables, gas hoses and cylinders. If anything is found to be damaged, do not use the heater; contact the Hire Company.
2. Check the gas regulator on the heater matches the valve on the cylinder. This connection has a left hand thread. Do not try to force connections or improvise them. Do not place clothes or other material on the heater or directly in front of it.
3. Do not use the heater where there is a fire risk from combustible materials or flammable liquids and gases.
4. Do not try to warm the cylinder to remove the frost. Take care when handling a frosty cylinder as the cold can cause frost burns. Handle cylinders carefully when moving them about. Do not drop them off vehicles.
5. The air blast will disturb papers and other light materials. Ensure there is nothing nearby that could be drawn towards the heater.
6. Ensure the back of the heater is clear and there are no loose items that will block the fan inlet.
7. Put the heater in the position that it is intended to be used before connecting the gas cylinder. Check there is no gas cylinder in the heated airstream.
8. If the heater is to be left unattended in an area where there may be children or infants, persons, barriers will need to be erected to keep people at a safe distance.
9. Never move the heater while it is lit.
10. Before lighting the heater - know how to turn it off.

FORCED AIR HEATER
1. Check the heater including mains cables, gas hoses and cylinders. If anything is found to be damaged, do not use the heater; contact the Hire Company.
2. Check the gas regulator on the heater matches the valve on the cylinder. This connection has a left hand thread. Do not try to force connections or improvise them. Do not place clothes or other material on the heater or directly in front of it.
3. Do not use the heater where there is a fire risk from combustible materials or flammable liquids and gases.
4. Do not try to warm the cylinder to remove the frost. Take care when handling a frosty cylinder as the cold can cause frost burns. Handle cylinders carefully when moving them about. Do not drop them off vehicles.
5. The air blast will disturb papers and other light materials. Ensure there is nothing nearby that could be drawn towards the heater.
6. Ensure the back of the heater is clear and there are no loose items that will block the fan inlet.
7. Put the heater in the position that it is intended to be used before connecting the gas cylinder. Check there is no gas cylinder in the heated airstream.
8. If the heater is to be left unattended in an area where there may be children or infants, persons, barriers will need to be erected to keep people at a safe distance.
9. Never move the heater while it is lit.
10. Before lighting the heater - know how to turn it off.

Useful Reference Points • www.hae.org.uk/businessguard

Before Starting Work...

PROPANE GAS SAFETY (...continued)