



LOADING NAILS

1. Use only nails or other fasteners that have been supplied or specified by the hire company. If you need different nails, contact the hire company.
2. Do not operate the trigger, or have the yoke depressed while loading or unloading.
3. Holding the tool by its handle in your right hand, align the heads of the nails with the silver channel in the rear of the magazine and insert one or two strips.
4. Push the nail strips forward.
5. Squeeze the release level and pull the follower ring to the rear of the magazine until the follower passes the last of the fasteners.
6. Release the follower and let it push the nails forward into the nose of the tool.
7. As the fasteners are used, the strip will be pushed along. The indicator at the side of the magazine will show when the tool requires reloading.
8. When there are approximately 10 fasteners left a safety mechanism will prevent further operation. Reload a fresh strip of fasteners.

USING THE CORDLESS NAILER

1. Wear your protective equipment including goggles and ear defenders.
2. Do not carry a loaded nailer around: unload the fuel cell and battery first.
3. To fix a nail, press the work-contact element against the workpiece, and pull the trigger.
4. This equipment will drive two to three nails per second, or up to 500 per hour. Do not try to force it to work faster - it will damage the tool.
5. When working close to the edge of your timber take care not to split it.
6. When you have finished work, unload and clean the cordless nailer and store it and the fuel cells, battery and fasteners securely.
7. If your equipment is not working properly or appears to be faulty, do not attempt to repair it. Contact the hire company.

Please keep this leaflet safely. It may be required for further information



Hire Association Europe
2450 Regents Court
The Crescent
Birmingham Business Park
Solithull B37 7YE

Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4109
Email: mail@hae.org.uk
website: www.hae.org.uk

Paslode IM65

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment

Read this entire leaflet before using the Paslode IM65

1. This equipment can be hazardous if misused. It should be used carefully and only by trained operators.
2. The fuel in the cells is highly flammable: any source of ignition including a lighted cigarette, could be hazardous. Take great care not to cause a fire or explosion.
3. Keep non-essential people, especially children away from the work area. Never allow a child to touch the equipment.
4. Do not insert a fuel cell, battery, or fasteners until required, and remove them when the equipment is not in use.
5. Always keep the nailer pointing away from yourself, and others. Keep your fingers away from the trigger.
6. Do not allow the work-contact element to be accidentally depressed against your body or any other object.
7. Keep the equipment safely in its protective case when it is not in use.
8. Do not indulge in any horseplay or irresponsible behaviour, while using, or working near the cordless nailer.
9. This cordless nailer must not be used by minors, or by anyone under the influence of drugs or alcohol.
10. This equipment is designed for operation by an able bodied adult. Anyone with either temporary or permanent disability must seek expert advice before using it.
11. You should wear the following items of personal protective equipment: ear muffs or plugs giving protection for levels up to 98 dBA; impact resistant goggles or face shield and strong work gloves.
12. You may also need a residual current device (rcd) if charging batteries from a 230-volt mains supply.



Every effort has been made by HAE/EHA to ensure that the information given in this document and supporting material is accurate and not misleading. HAE/EHA cannot accept responsibility for any loss or liability perceived to have arisen from the use of any such document/material. Only Acts of Parliament and Statutory Instruments have the force of law and only the courts can authoritatively interpret the law.

Any unauthorised reproduction – manually or electronically – is STRICTLY prohibited

1. The battery will slowly discharge while inserted even if the tool is not being used.
2. Use only the correct batteries for your equipment as supplied or recommended by the hire company.
3. The battery compartment is located on the right side of the magazine. Hold the equipment upside down to insert or remove the battery.
4. The light emitting diode in the handle will display either red or green to indicate the condition of the battery.
5. When the work-contact element is not depressed, a flashing green light shows that the battery is in tool. If the light flashes red, the battery is flat: you should recharge the battery.
6. When the work-contact element is depressed, a continuous green light shows that battery is charged ready for use.
7. A continuous red light shows that the battery is flat and needs recharging.
8. The battery must be removed for recharging.
9. Recharge the battery only with the charger supplied, following the instructions given by the hire company.
10. If you have an rcd, plug it into the 230-volt socket. Plug the charger into the rcd.
11. Toxic and flammable fumes are produced when charging some types of batteries. Charging should be carried out in a dry, cool, well-ventilated and safe location.

BATTERY

6. Load the fuel cell in so that the metering valve goes in last. Locate the stem of the valve into the yellow aperture in the adapter.
7. Shut the compartment, making sure the fuel cell does not move.

1. The work-contact element is the part of the tool that is pushed against the work piece. Its position can be adjusted to fit different depths of penetration, and for fasteners of different lengths.
 2. The battery must be removed before any adjustment is made.
 3. Turn the adjustment wheel near the nose of the machine to adjust the depth of penetration.
 4. Reload the battery when you are ready to start using the equipment.
- ## LOADING FUEL CELLS
1. Use only fuel cells and metering valves that have been supplied or specified by the hire company.
 2. You need to fit the metering valve to the fuel cell before you can load the cell.
 3. First, push the valve and cap onto the fuel cell until a hiss of gas is released. Then remove the valve and cap from the cell, and take the cap off the valve by pulling it back.
 4. Put the valve back in position on the fuel cell with the front pointing away from you. Push the front of the valve forwards and down, and then push the back down onto the cell until it clicks twice. It is now ready to load.
 5. The fuel cell compartment is located at the back of the nailer. Open it by pressing the cover inwards then swinging it down towards the back of the handle.

DEPTH ADJUSTMENT



Before Starting Work...

1. Do not use this equipment where there is a fire risk from combustible materials, or flammable liquids and gases.
 2. If you plan to use the tool for long periods, or in confined spaces make sure that you have adequate ventilation to disperse the exhaust fumes.
 3. Make sure that your work area is clear and safe and that no-one is near to you or could distract you. Only essential people should work in the area when the cordless nailer is being used.
 4. This tool should only be used for wood to wood nailing.
 5. Only use nails recommended by the hire company in this tool.
 6. Protect other people from the noise and danger. Warn others to keep away. If possible, put barriers around your work area.
 7. Do not use the cordless nailer in the rain or where there is excessive moisture.
- ## OPERATORS
1. You should only operate this cordless nailer if you have adequate knowledge and understanding of the equipment and the job to enable you to use it without risk to yourself or others.
 2. The following items of personal protective equipment (PPE) are the minimum that should be worn whenever you use the cordless nailer. Particular jobs or environments may require a higher level of protection.
 3. This cordless nailer will cause noise levels up to 98 dBA - wear appropriate ear muffs or plugs giving hearing protection for this level as a minimum.
 4. Impact resistant goggles, or face shield when working with this equipment.
 5. Strong gloves will help protect your hands.

Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4109
Email: mail@hae.org.uk
website: www.hae.org.uk

Hire Association Europe
2450 Regents Court
The Crescent
Birmingham Business Park
Solithull B37 7YE

